Part 2 Connection

- Part 2A: Connect via Bluetooth
- Part 2B: Connect via Wi-Fi

Note: The Ancel Trucker device supports both Bluetooth and Wi-Fi connections. Bluetooth is recommended as the primary connection method.

Part 2A: Connect via Bluetooth

Step 1: When opening the app, enable Bluetooth and Location as prompted.

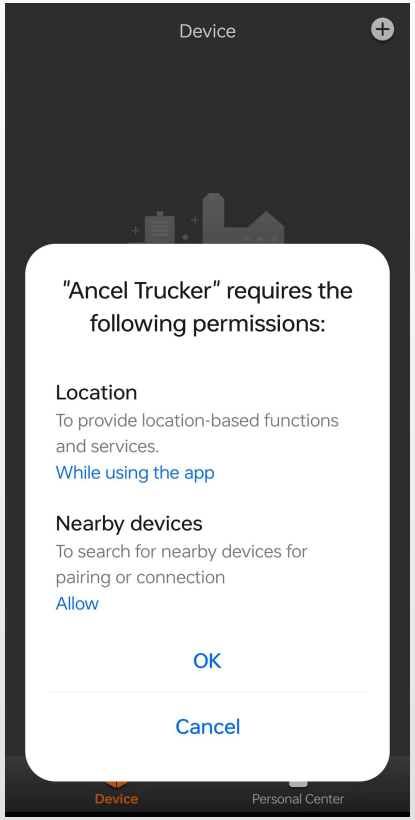

Step 2: Tap the "+" icon in the top right to add the device via Bluetooth.
Once connected, you will see the "Enter" button.

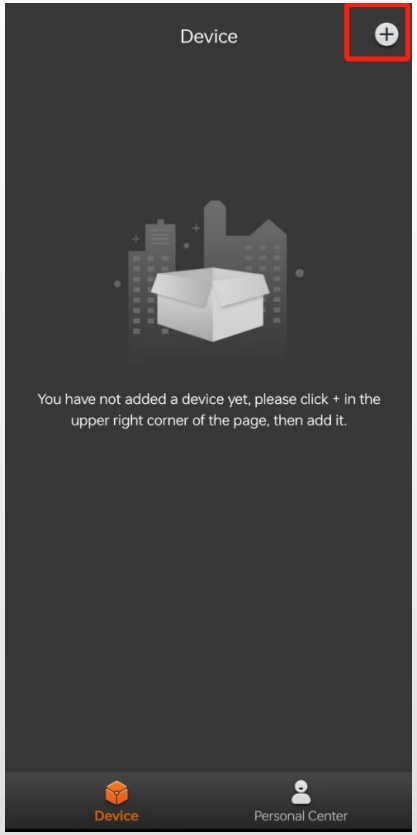

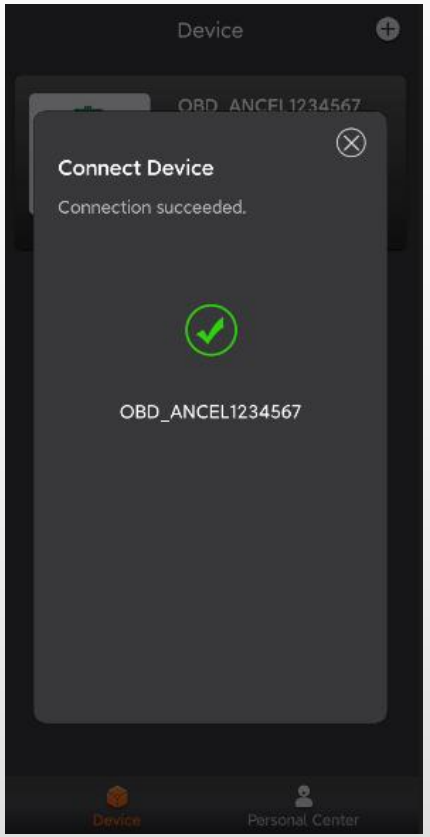

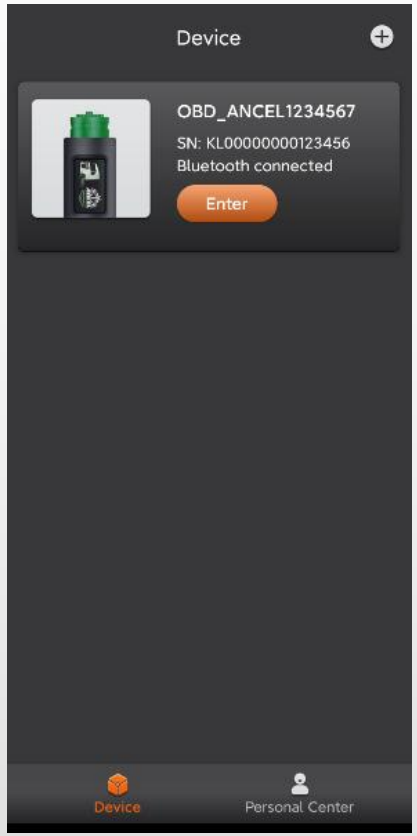

Part 2B: Connect via Wi-Fi

Step 1: Go to phone settings -turn on location services;

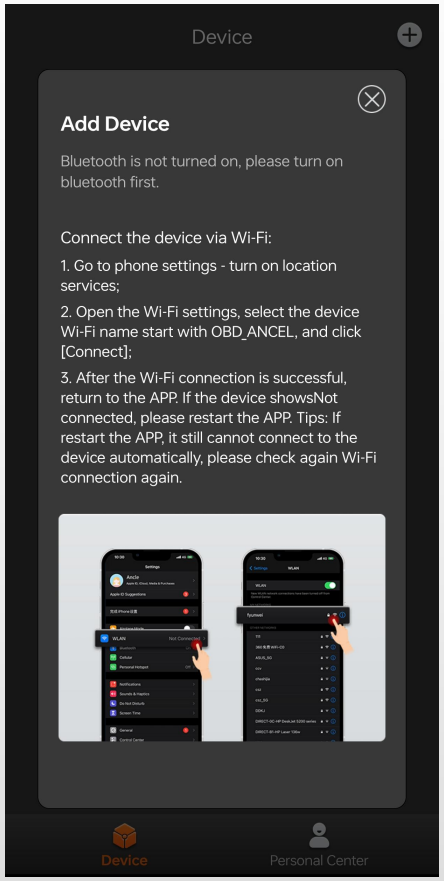

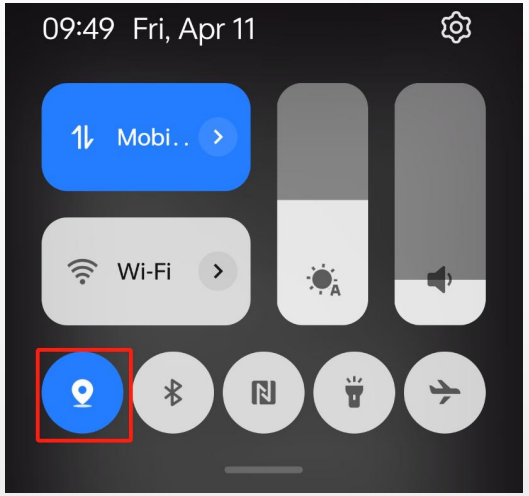

Step 2: Open the Wi-Fi settings, select the device Wi-Fi name start with **OBD ANCEL**, and click **Connect**;

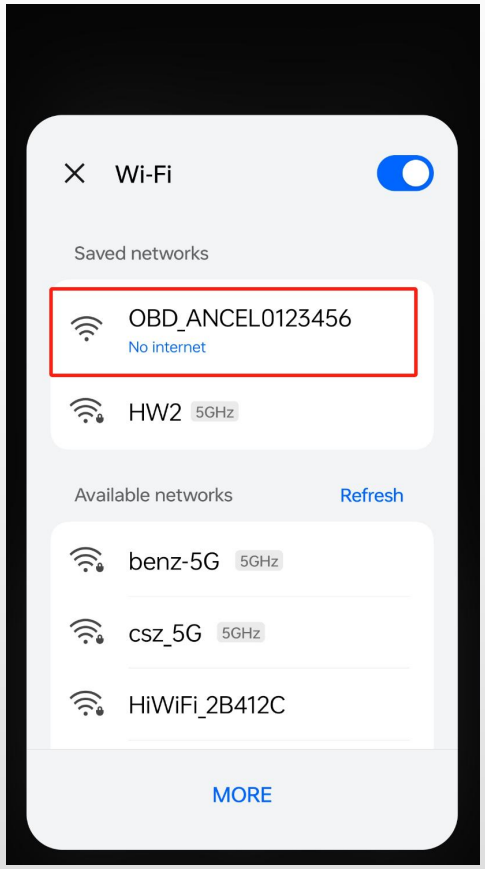

Part 2B: Connect via Wi-Fi

Step 3: After the Wi-Fi connection is successful return to the APP, you will see the "Enter" button.

Note: If the device shows Not connected, please restart the APP.

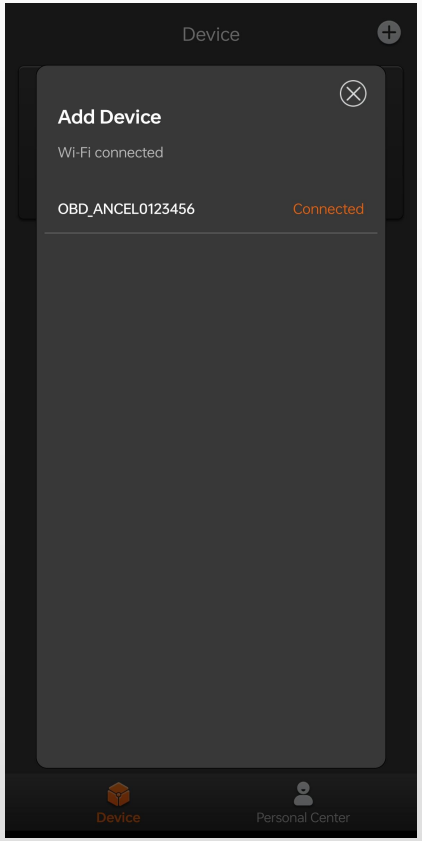

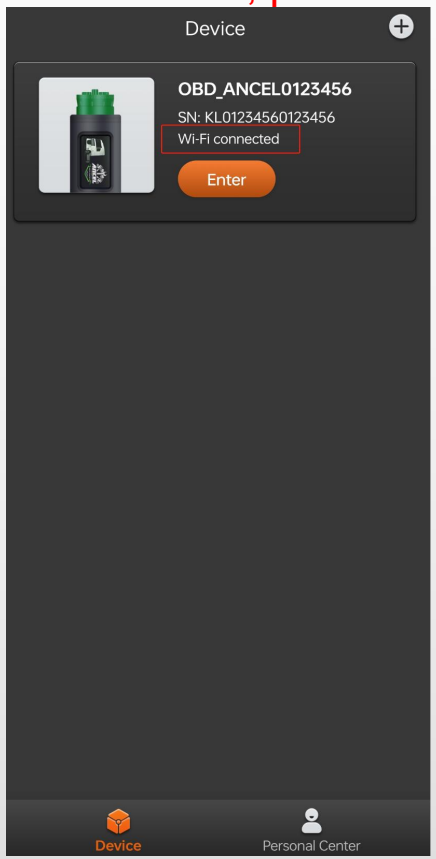

WiFi Connection Tips

- First, open the Ancel Trucker App.
- Then, connect to the device's WiFi network in your phone's settings.
- Do not connect to WiFi before opening the app.

Follow this order to ensure a successful connection.