


AD510 Update

Step 1: Link to the website:


<https://www.anceltech.com/support/download>

Find the AD510 Software upgrade files, and download to your computer (Supports Win7, Win 8, Win10, and XP system.)


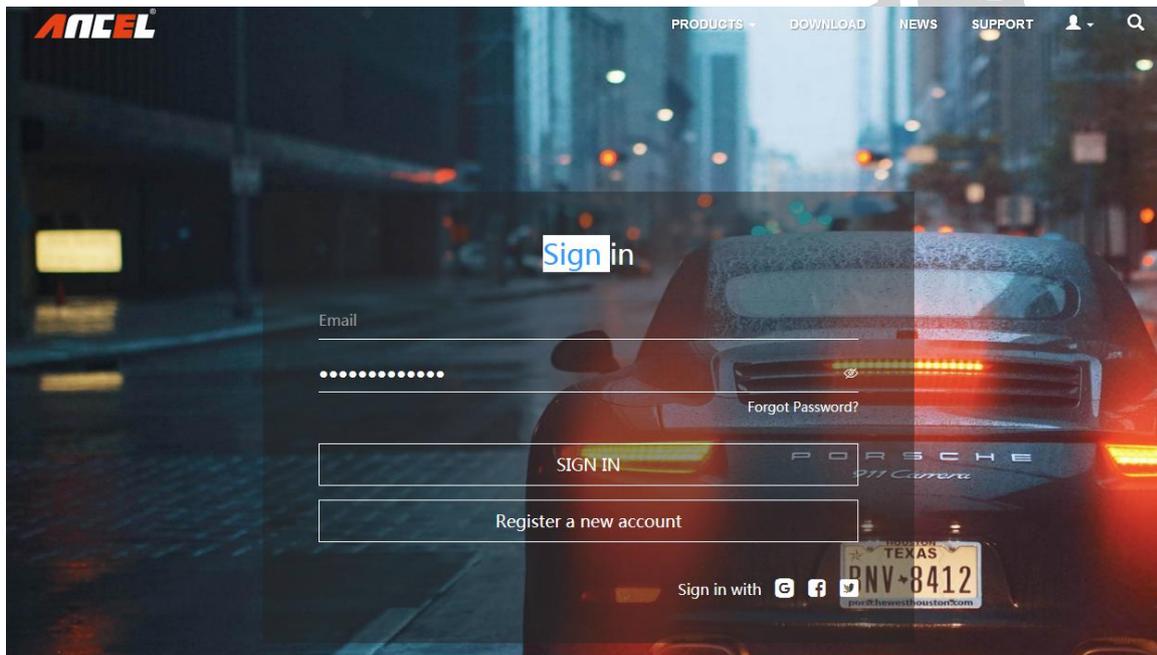


Step 2: Please extract the file:

It must be the (WinRAR.rar) Convert into a (file folder), and open the **AD510_Upgrade** file folder. (It's very important. If you don't do this you will not be able to upgrade the device)

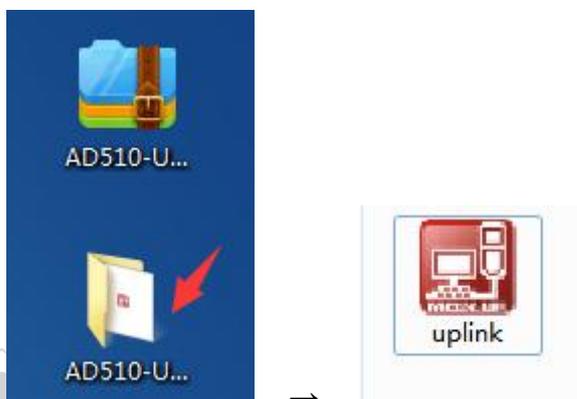


Step 3: Open the folder and install "uplink.exe."

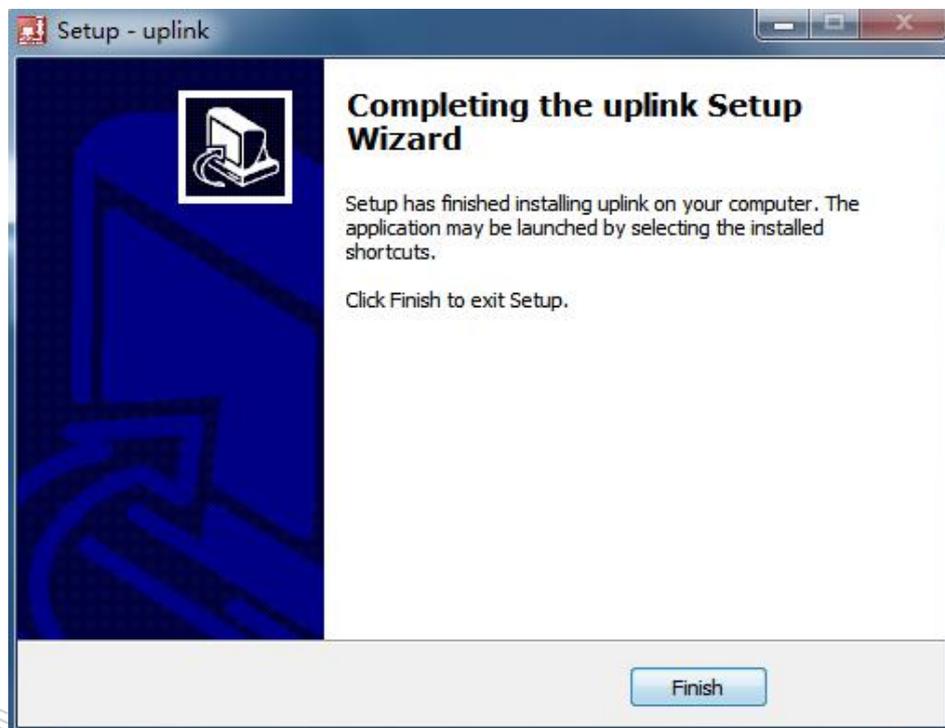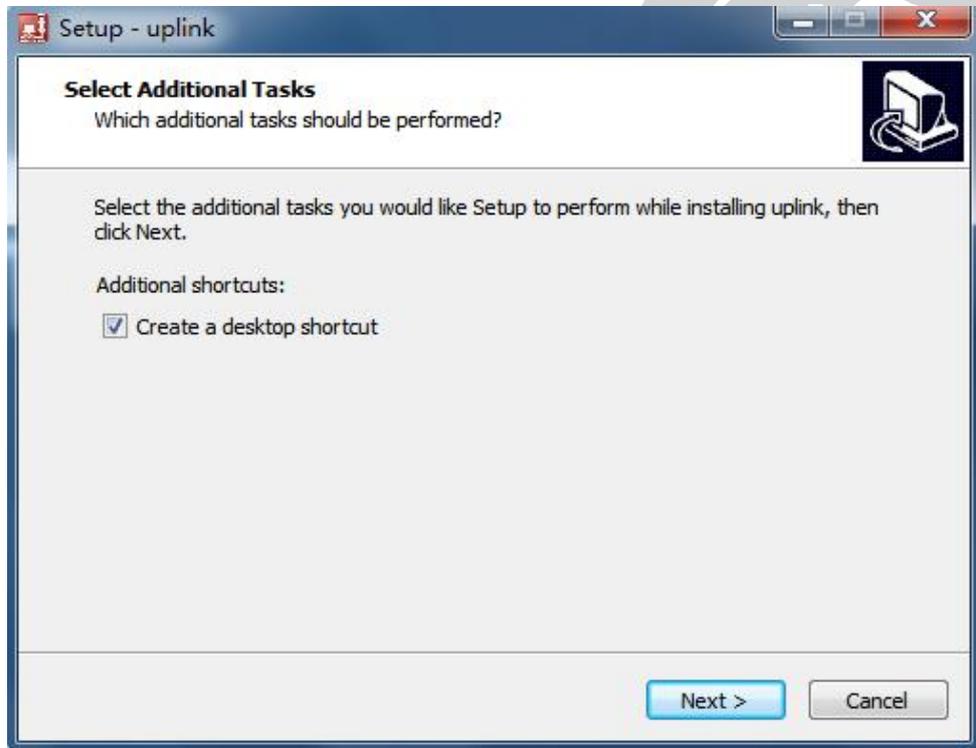

Step 4: Once you hit finish, you will see the “Uplink” software on desktop and then open the “Uplink” software.



Step 5: When you see this page, please hold down any button on the device continuously and then connect the device to PC via a USB cable(That's very important), then let go of the button when "Update Mode" displays on the device screen. Finally, click “Check Update” to finish the Upgrade.

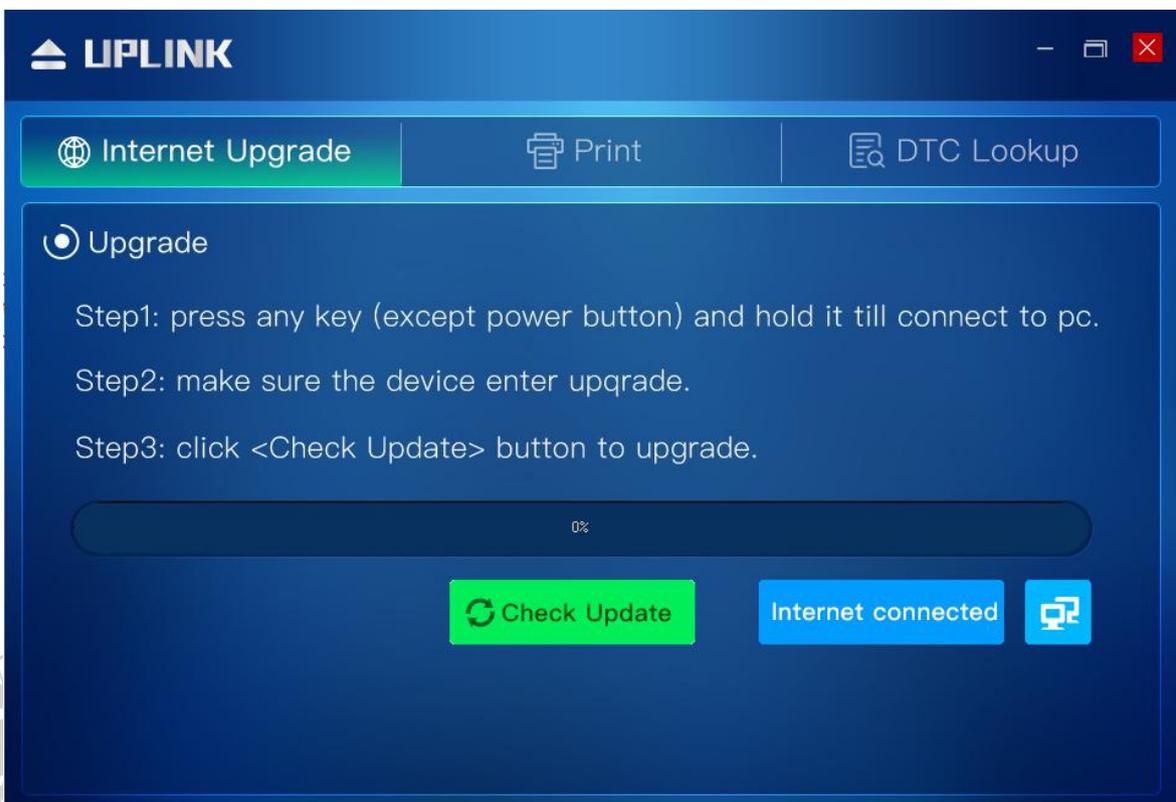

Step 6: Once the update is complete, the scanner will beep once and say "Update Success."

