

AD410 Update Guide

Step 1: Visit the Download Center on our official website.

<https://www.anceltech.com/support/download>

Find the update tool for the AD410, and download to your computer.

The screenshot shows the AnceL website's Download Center. At the top, the AnceL logo is on the left, and navigation links for PRODUCTS, DOWNLOAD, NEWS, and SUPPORT are on the right. The main heading is "Download Center" with a breadcrumb "Front Page / Download Center". Below this is a "Welcome To AnceL Download Center" message. Two dropdown menus are highlighted with red boxes and numbered 1 and 2. The first dropdown, "Select Model", is set to "HANDHELD SCANNER>AD410". The second dropdown, "Select Product", is set to "ANCEL AD410 Enhanced OBD II Vehicle Code Reader Automotive". Below these, the product name "ANCEL AD410 Enhanced OBD II Vehicle Code Reader Automotive OBD2 Scanner" is displayed in large text, with "Download" in red. Underneath, there are two sections: "Product User's Manual" with links for "AD410 Installation Manual" and "AD410 User Manual (English)", and "Software" with a link for "V2.07.007". A red box highlights the "Software" link, which is numbered 3. Three red arrows point from the numbers 1, 2, and 3 to their respective elements.

ANCEL PRODUCTS - DOWNLOAD NEWS SUPPORT

Download Center

Front Page / Download Center

Welcome To AnceL Download Center
any product user's manual and software updates you could find here

Select Model: HANDHELD SCANNER>AD410

Select Product: ANCEL AD410 Enhanced OBD II Vehicle Code Reader Automotive

ANCEL AD410 Enhanced OBD II Vehicle Code Reader Automotive OBD2 Scanner

Download

Product User's Manual


- AD410 Installation Manual (2019.04.08)
- AD410 User Manual (English) (2019.04.08)

Software

- V2.07.007 (2020.12.11)

Step 2: Unzip and extract:



Please **unzip** the downloaded compressed file (RAR format), and extract all the contents to a new founded folder on your **Desktop** (suggested) or any other directory.

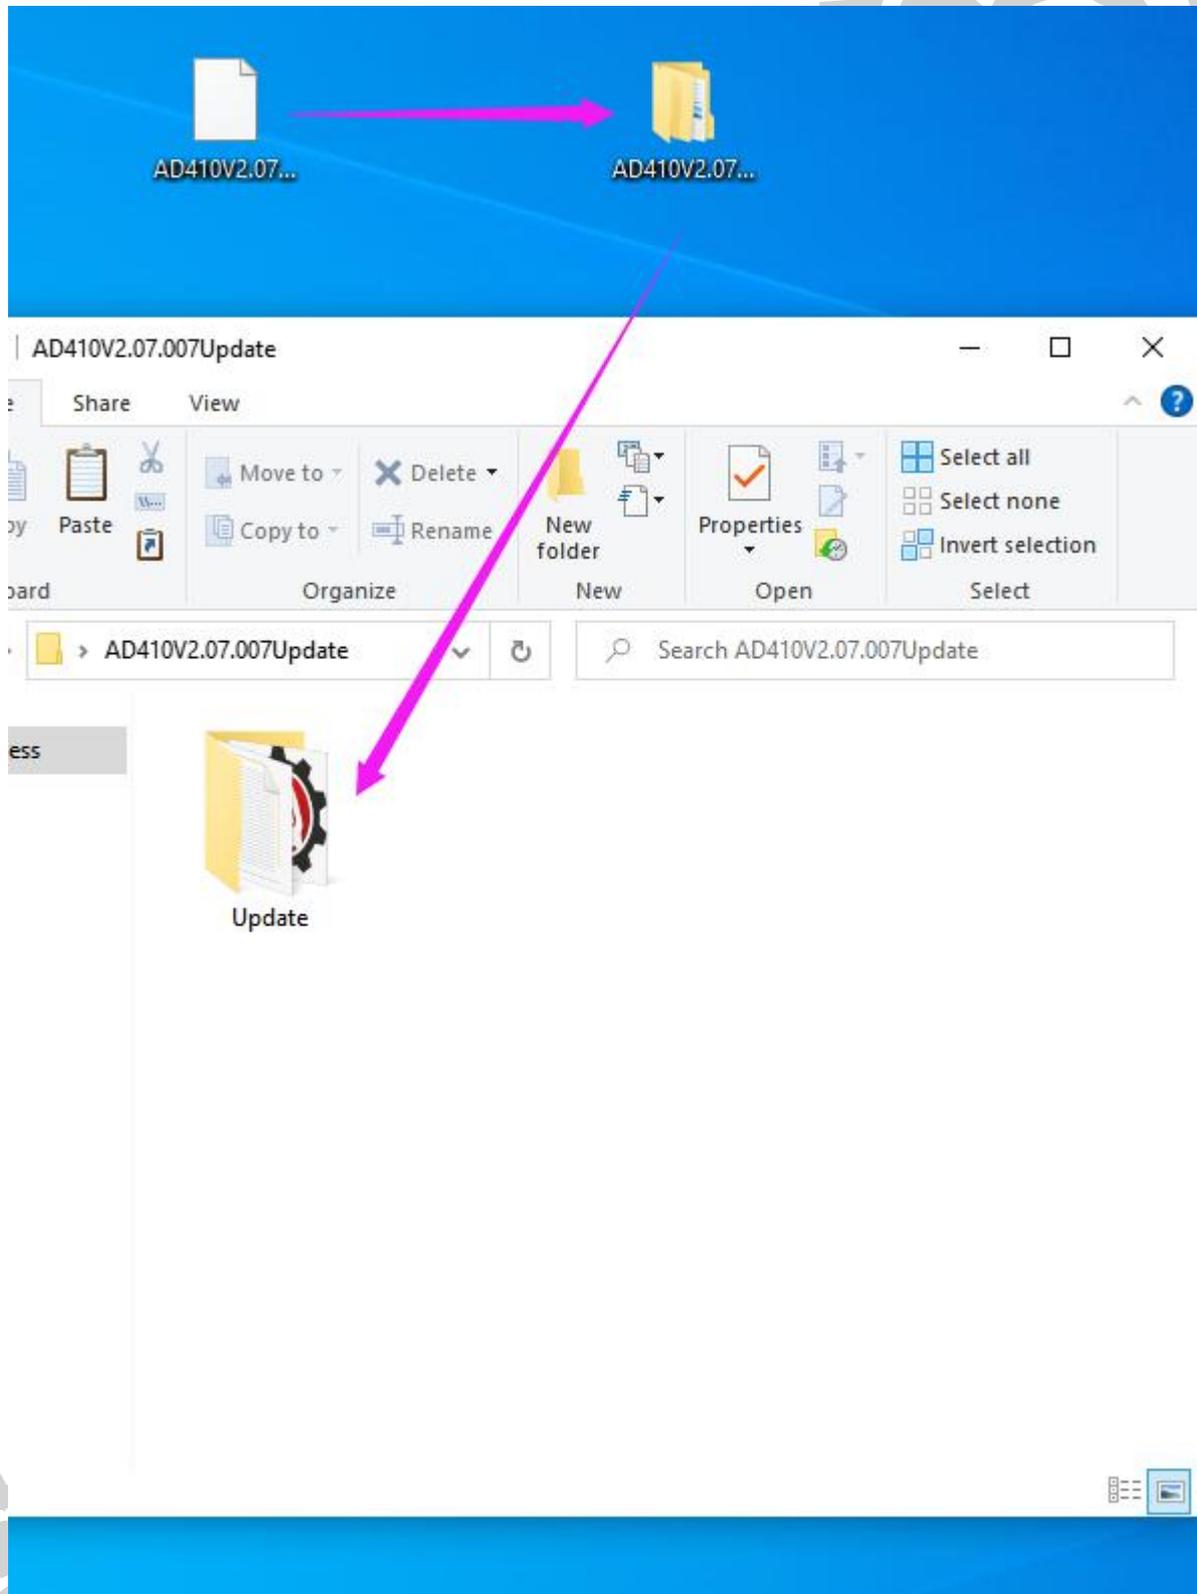


Step 3: Install driver (Windows 7)

Please skip to **Step 4** if you are using Windows 8 or 10.

1. Open the "Update" folder.

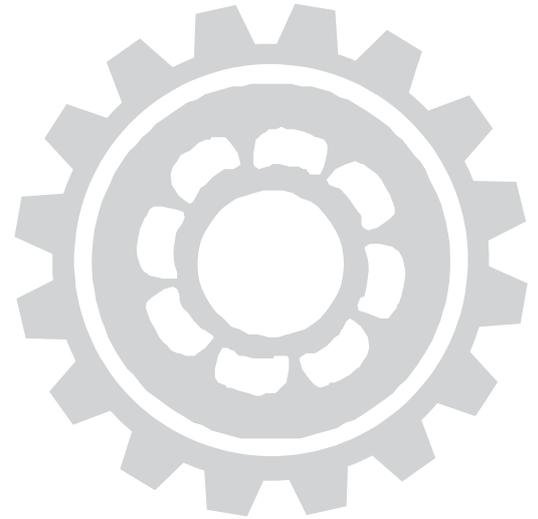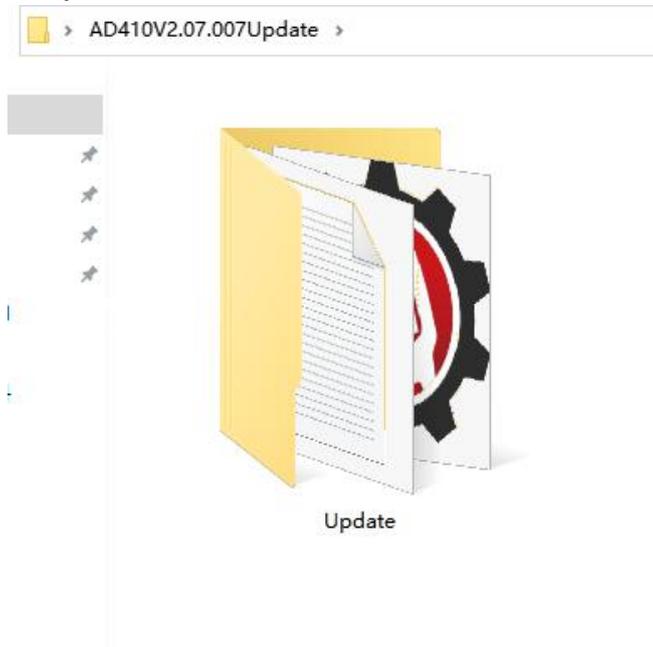

2. If you are using the Windows 7 system, you will need to have the driver installed first.

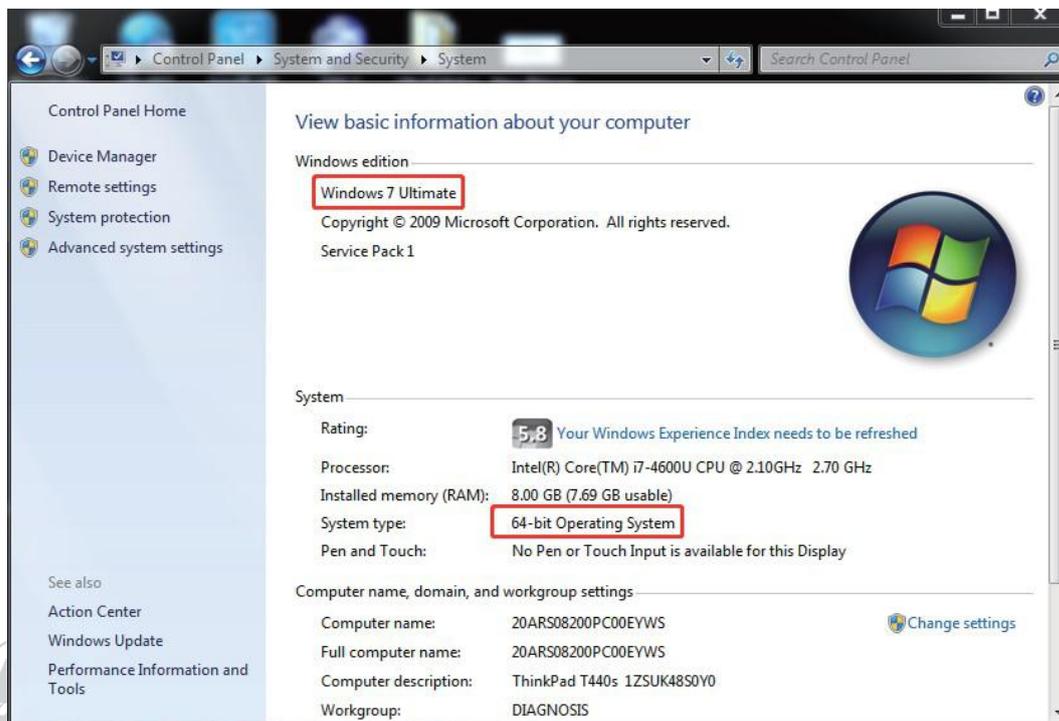

2.1 Open the “driver” folder


bin	2020/12/18 17:54
driver	2020/12/18 17:54
README.txt	2019/5/20 11:41
Update.exe	2020/12/8 13:52




2.2 Click the “install driver.bat”, then the driver will be installed automatically.

x64	2020/12/18 17:54
x86	2020/12/18 17:54
install driver.bat	2019/7/1 10:56

Step 4: Connect the AD410 to your computer via a USB cable.

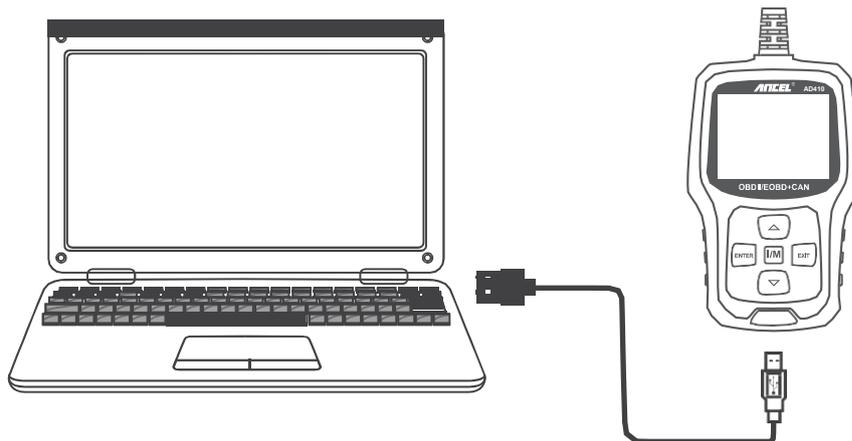

The screen of AD410 will show two vertical bars when connected to the computer.

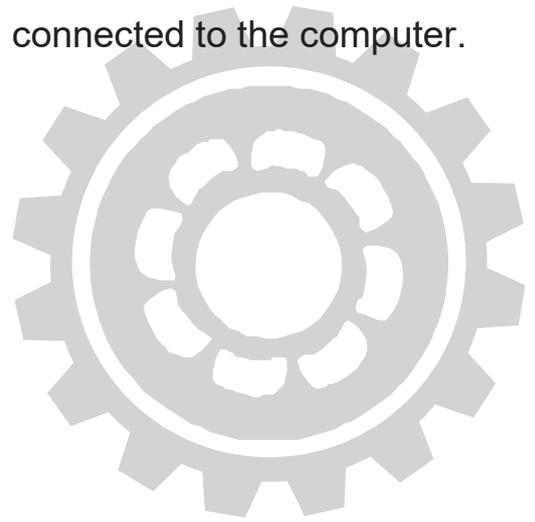

Step 5: Run Update.exe

open the upgrate tool

link the update

Name	Date modified	Type	Size
bin	2/5/2018 7:43 PM	File folder	
driver	2/4/2018 6:13 PM	File folder	
Help.avi	1/9/2017 3:33 PM	Video Clip	56,189 KB
README.txt	7/20/2018 12:03 PM	Text Document	1 KB
Update.exe	7/6/2017 9:50 PM	Application	9,166 KB


If failed to connect, please check the connection between the AD410 and computer.

You can:


1. Switch another USB cable;
2. Check/switch the USB port on your computer;
3. Install the driver manually. Here's how:

3.1 Right click the “**My computer**” icon on the Desktop and select “**Manage**”


3.2 Enter the “**Device Manager**” menu

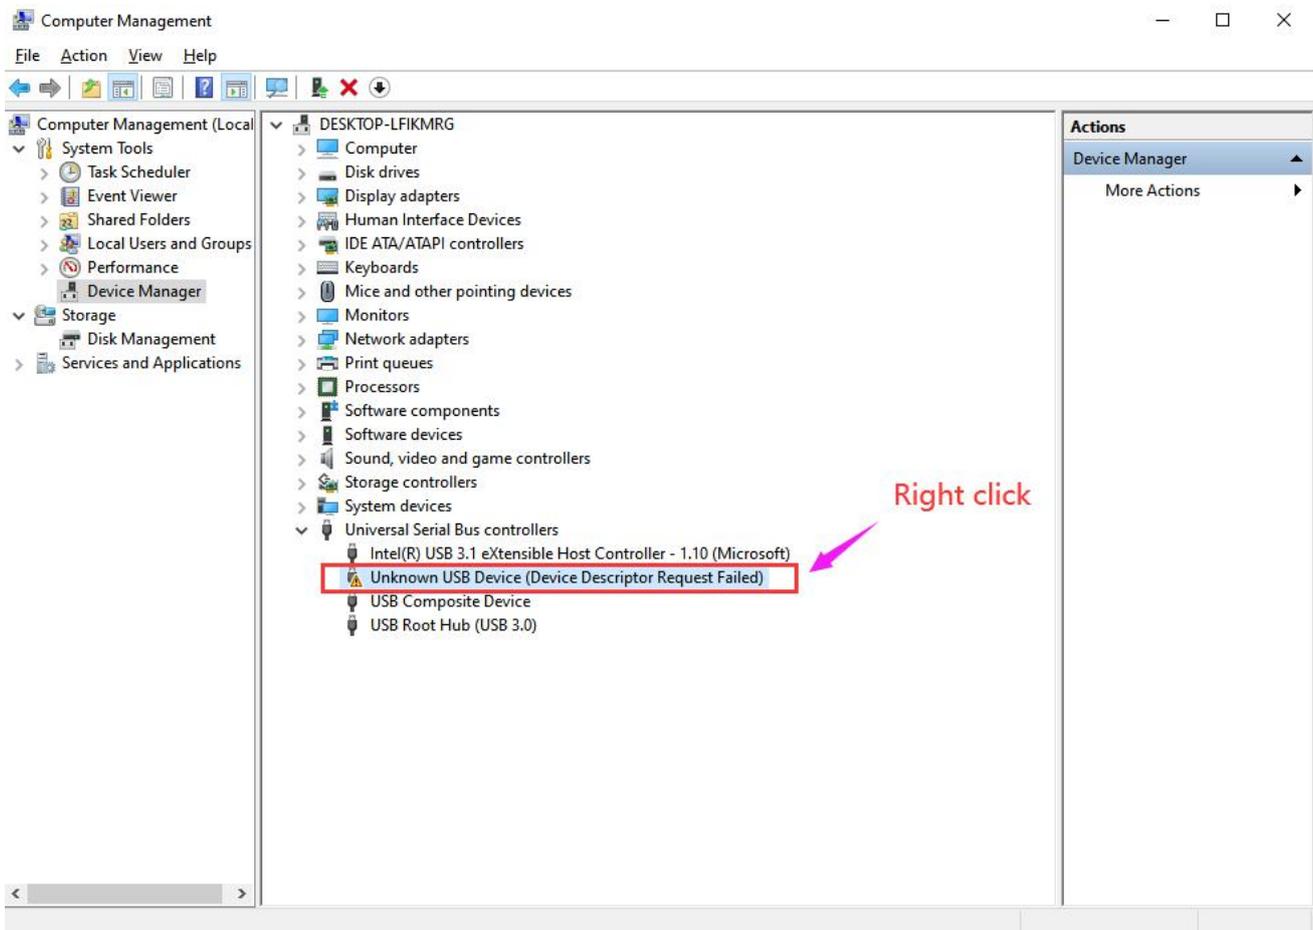


3.3 Right click the abnormal device (with a yellow ! sign) and select “Update Driver Software...”

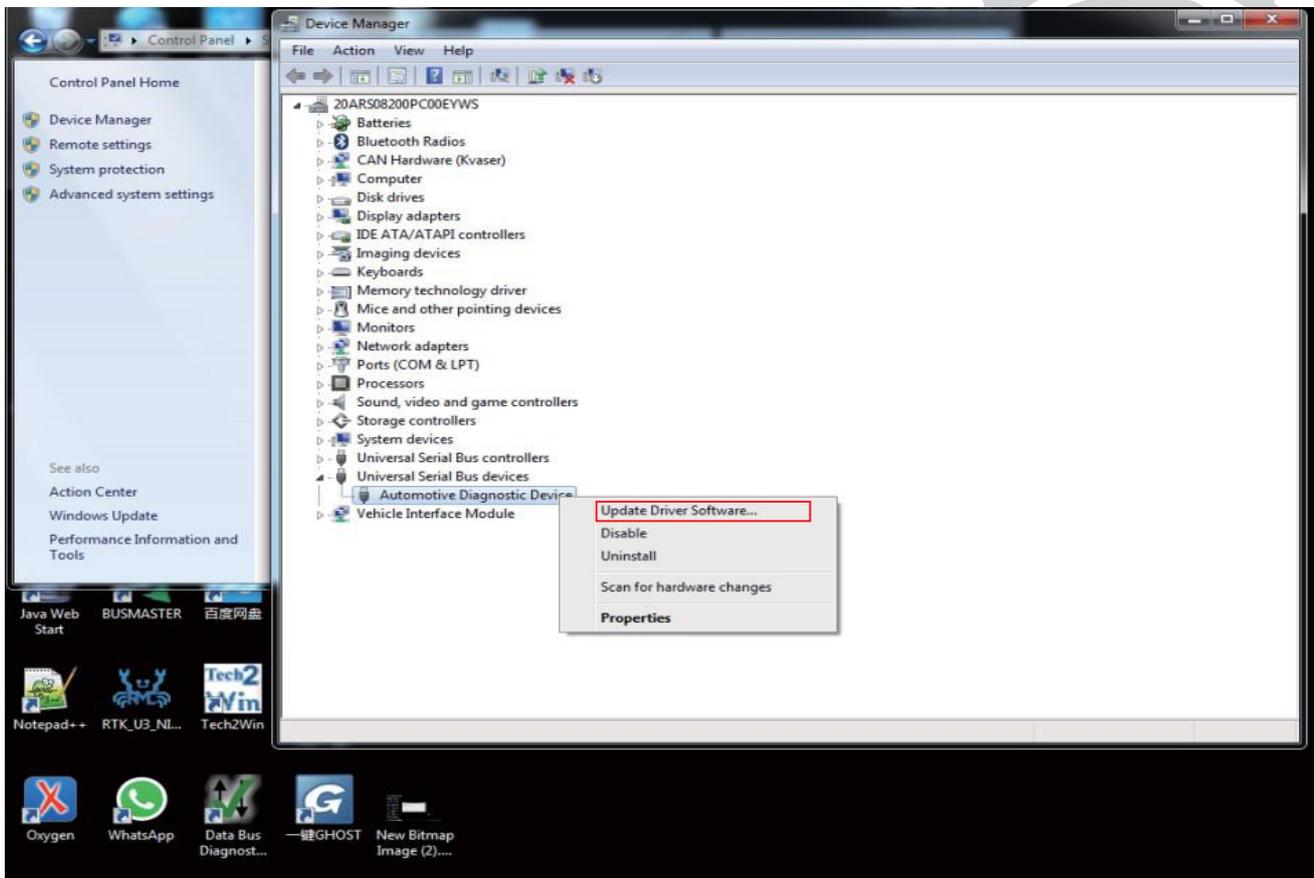


3.4 Select “Browse my computer for drivers”.

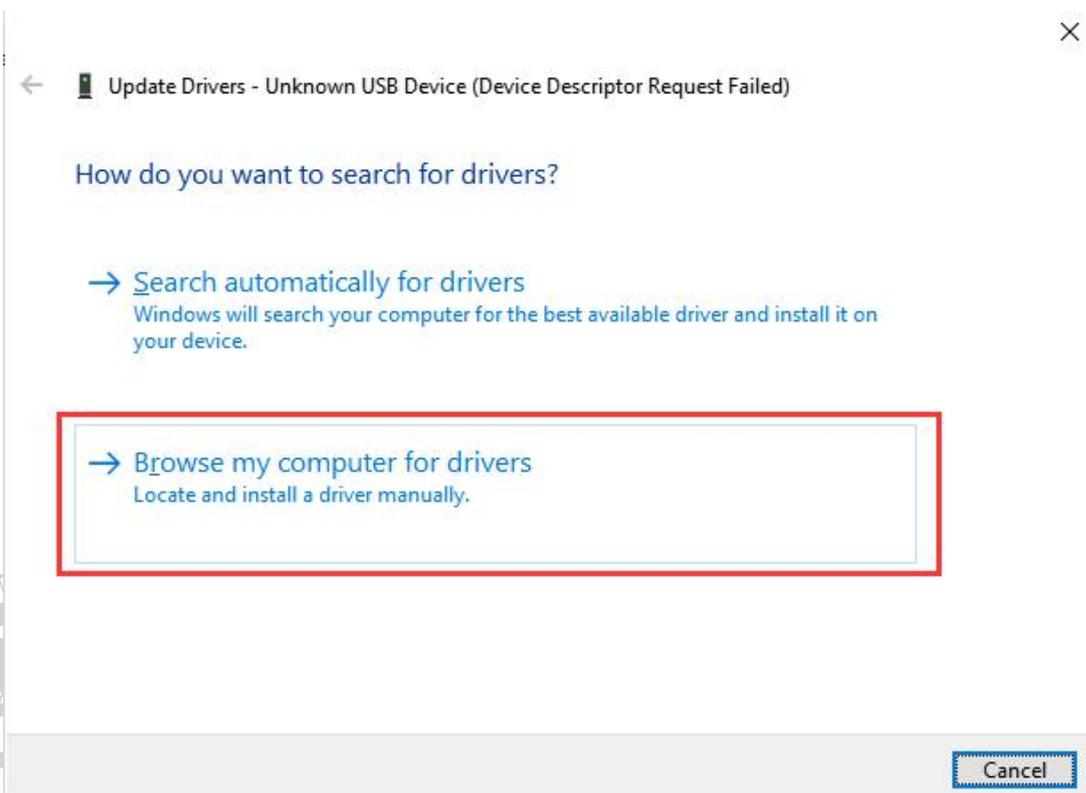

3.5 Browse and find the corresponding folder in the “driver” folder.

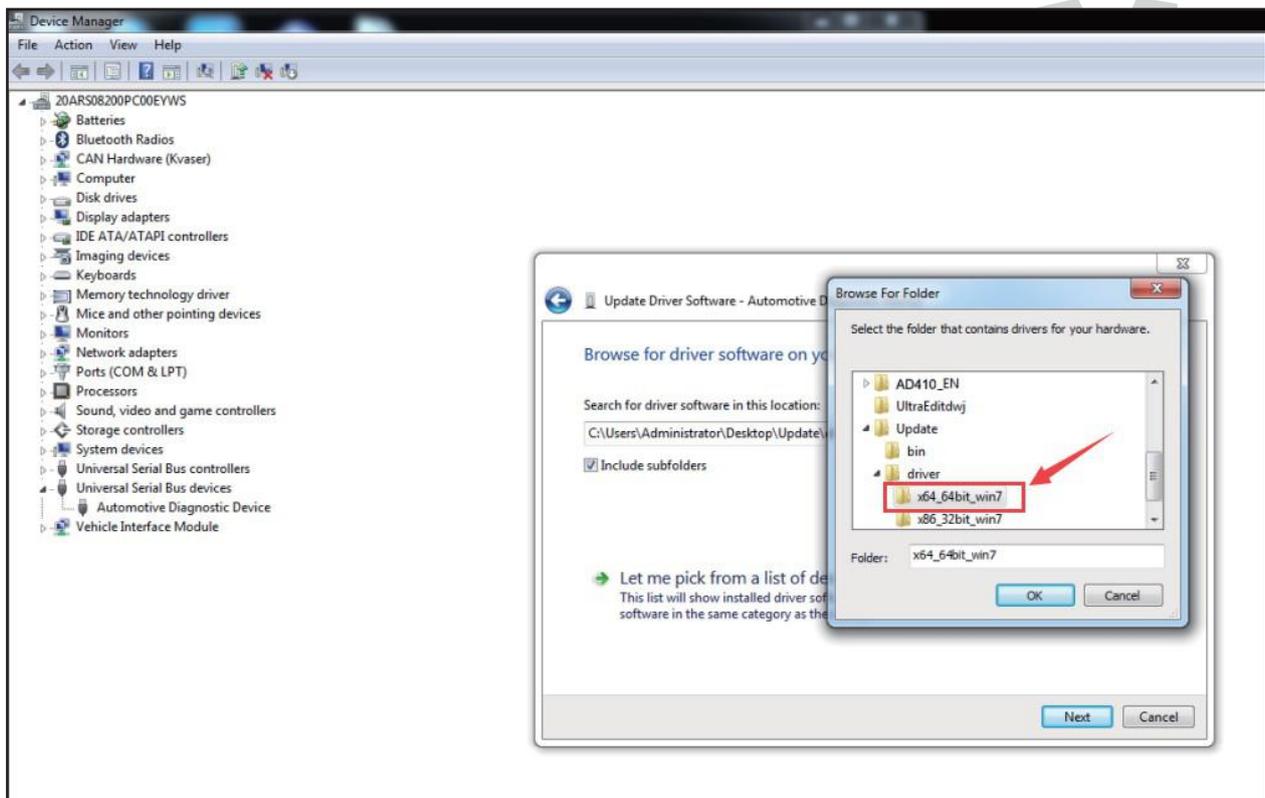

3.6 Install the driver.

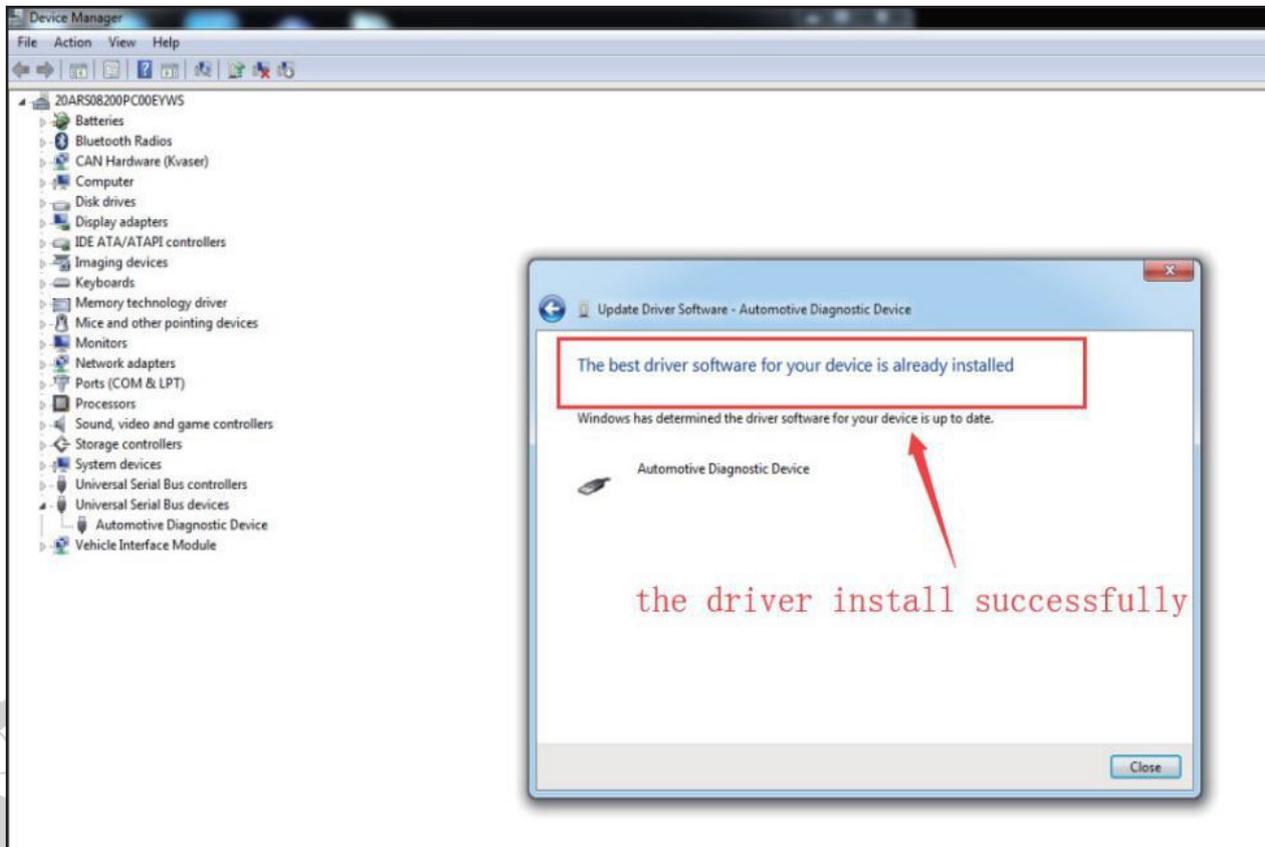

Step 6: Start updating



The screenshot shows a Windows File Explorer window with the address bar set to 'AD410_EN > Update'. The left sidebar shows the 'Favorites' and 'Libraries' sections. The main pane displays a list of files and folders:

Name	Date modified	Type	Size
bin	2/5/2018 7:43 PM	File folder	
driver	2/4/2018 6:13 PM	File folder	
Help.avi	1/9/2017 3:33 PM	Video Clip	56,189 KB
README.txt	7/20/2018 12:03 PM	Text Document	1 KB
Update.exe	7/6/2017 9:50 PM	Application	9,166 KB


Overlaid on the File Explorer is a 'Device upgrades' dialog box. It features a progress bar at the top, which is approximately 75% full. Below the progress bar, the text reads: 'Updating the main file. Please wait about a minute...'. There are four buttons: 'Feedback', 'Review & Print', 'Update', and 'Exit'. At the bottom of the dialog, there is a note: 'Scanner connected to the computer, the screen is black! When update is successful, the screen lights up.'



When the device is updating, the screen will show a square changing between black and red.



The software will pop a message box to tell you that the process has completed.

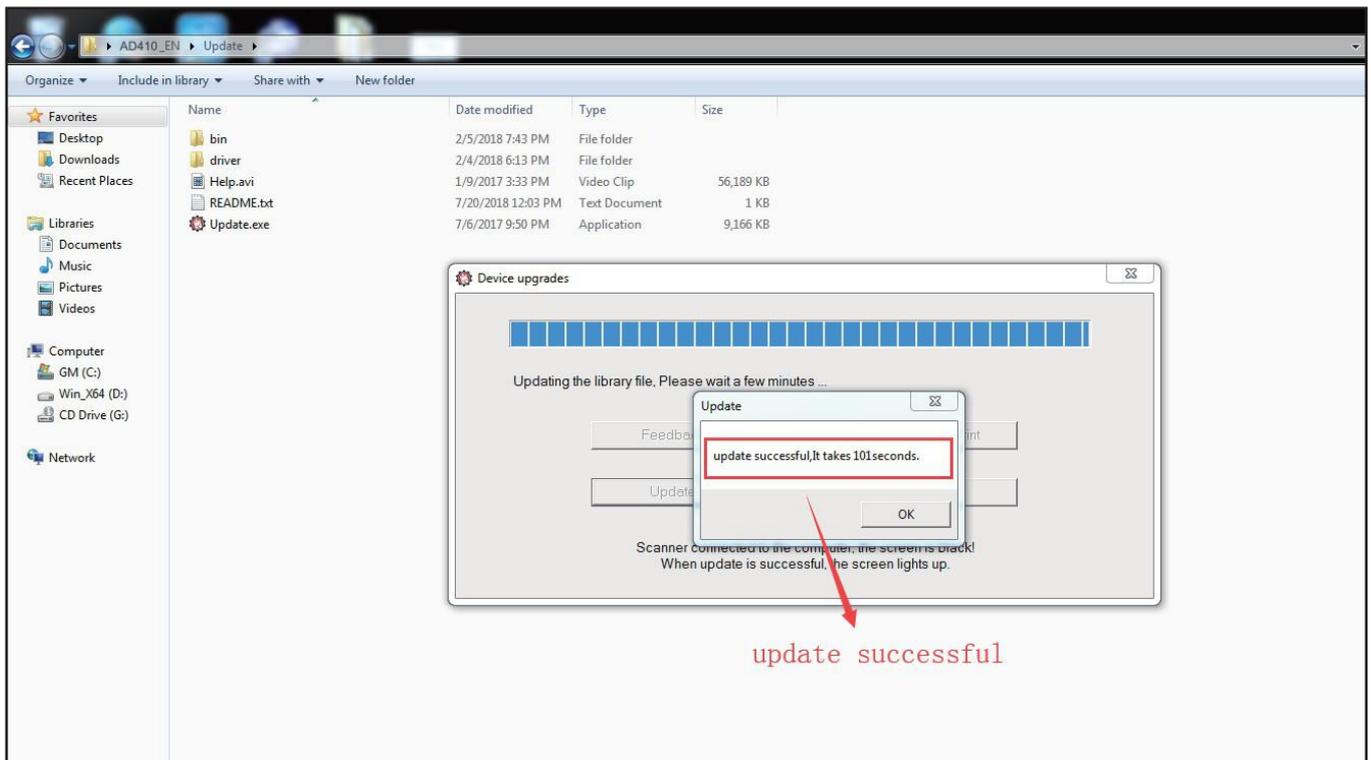

The AD410 will show diagnostic menu if updated successfully.

